MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil & Filter	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Tire Rotation	Perform	7,500	Perform	7,500
Battery Condition	Inspect	7,500	Inspect	Same As Normal
Drive Belts	1st Inspect Add.Inspect	60,000 or 72 mos. 15,000 or 24 mos.	Inspect	Same As Normal
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Drive Shaft & Boots	Inspect	15,000	Inspect	7,500 or 6 mos.
Air Cleaner Filter (Engine)	Inspect Replace	7,500 30,000	Replace	More Frequently
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Front Brake Disc / Pads, Calipers	Inspect	15,000	Inspect	More Frequently
Rear Brake Disc / Pads	Inspect	15,000	Inspect	More Frequently
Electronic Throttle	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Steering Gear Box, Linkage & Boots / Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect Replace	15,000 30,000	Inspect Replace	Same As Normal Same As Normal
Automatic Transaxle Fluid	Inspect	40,000 or 48 mos.	Replace	60,000
Coolant	1st Replace Add.Replace	120,000 or 120 mos. 30,000 or 24 mos.	Replace	Same As Normal
Brake Fluid	Inspect	15,000	Inspect	Same As Normal
Fuel Line, Fuel Hoses & Connections	Inspect	30,000	Inspect	Same As Normal
Manual Transaxle Fluid	Inspect	40,000 or 48 mos.	Replace	80,000
Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Inspect	30,000	Replace	Same As Normal
Tensioner / Idler - Timing Belt	Inspect when the timing belt is replaced			
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Timing Belt	Replace	90,000 or 108 mos.	Replace	60,000 or 72 mos.
Spark Plugs (Iridium Coated)	Replace	100,000 or 120 mos.	Replace	More Frequently

*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

NP150-82011-B
(Rev 7/23/10)
Printing XX/XX/XX

HYUNDAI **ELANTRA TOURING**

Quick Reference Guide

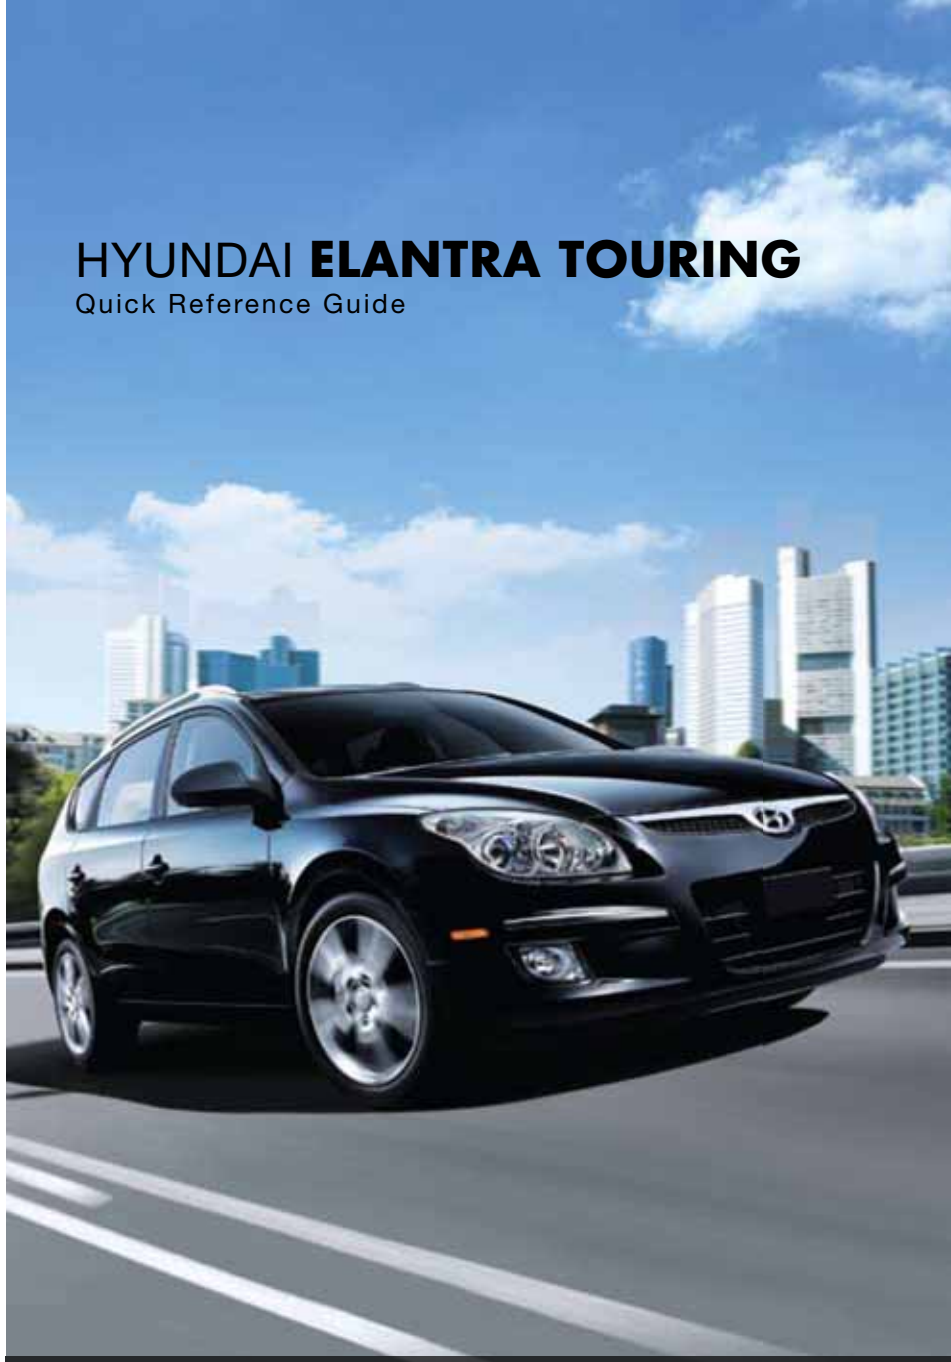

HYUNDAI

www.hyundai.com

Roadside Assistance: **1-800-243-7766**
Consumer Affairs: **1-800-633-5151**
XM® Radio: **1-800-967-2346**

Table of Contents

Audio (Steering wheel audio control)	14
AUX, USB and iPod port	15
Basic safety precautions	04
Central door lock switch	06
Child-protector rear door lock	07
Climate control	13
Clock adjustment	17
Cruise control system	18
Electronic stability control	20
Front seat adjustment	02
Fuel filler lid	07
Headlights and fog lights	08
Headrest adjustment	02
Instrument cluster	10
Instrument panel illumination	11
Occupant classification system	04
Outside rearview mirror	05
Rear seat folding	03
Remote keyless entry	06
Seat belt adjustment (Front seat)	03
Seat warmer	17
Streering wheel audio control	15
Sunroof	16
Tilt and telescopic steering wheel	05
Tire pressure monitoring system	18
Transmission	19-20
Trip computer	11
Wiper and washer	09

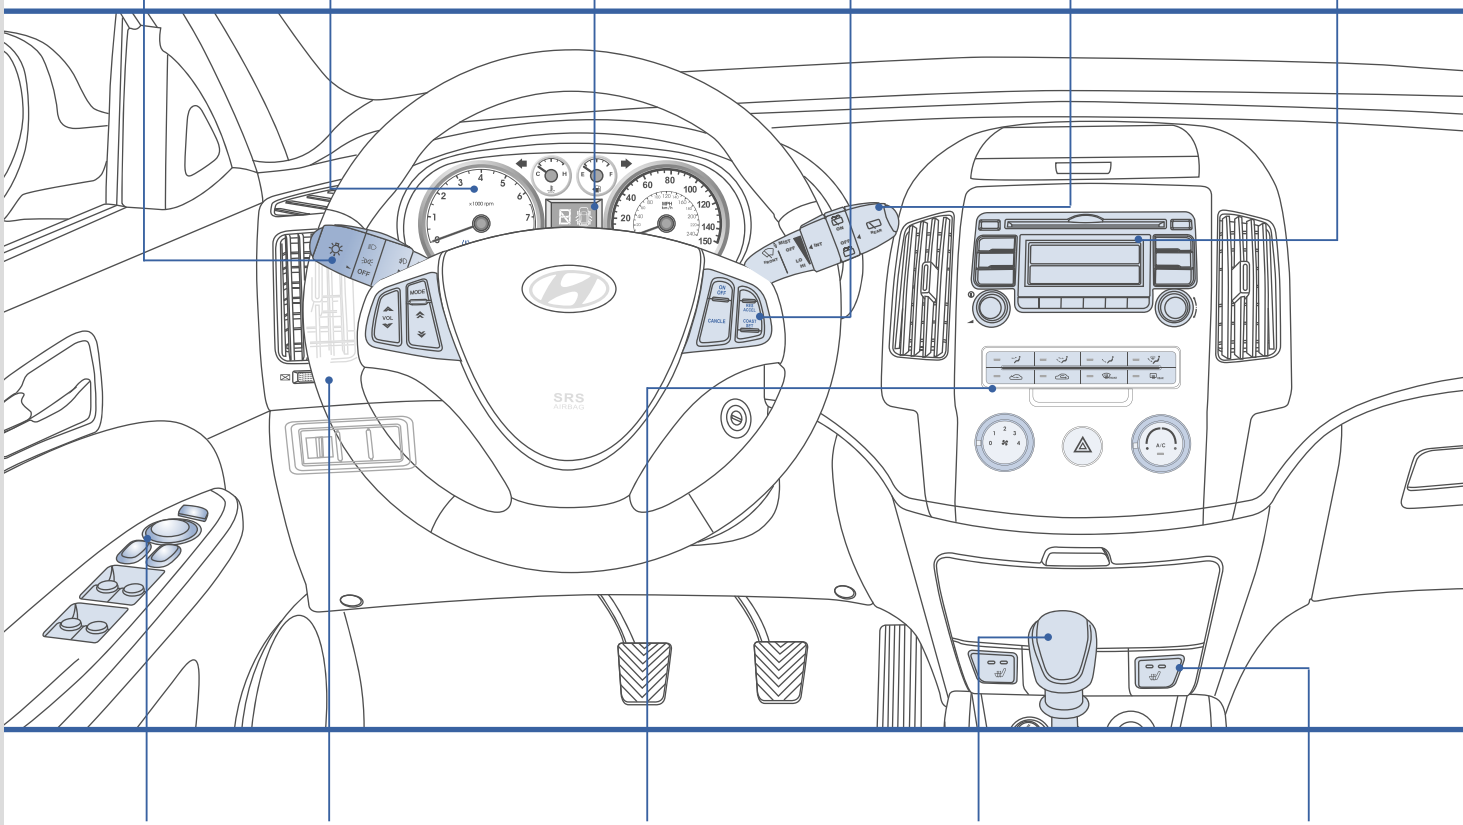

Headlights and fog lights
Page08

Instrument cluster
Page10

Trip computer
Page11

Cruise control system
Page18

Wiper and washer
Page09

Audio
Page14

Outside rearview mirror
Page05

Tilt and telescopic Steering wheel
Page05

Climate control
Page13

Transmission
Page19-20

Seat warmer
Page17

FRONT SEAT ADJUSTMENT

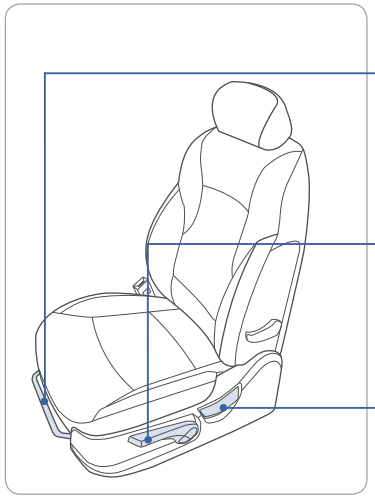

Forward and backward



Seat cushion height (for driver's seat)



(if equipped)

Seatback angle



REAR SEAT FOLDING

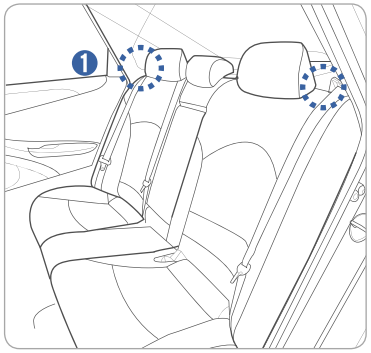

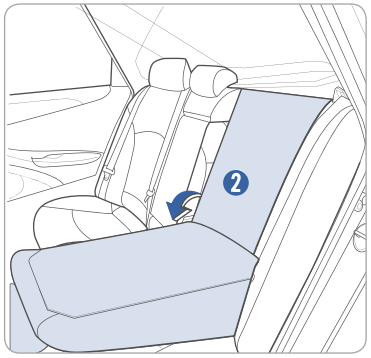

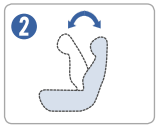

HEADREST ADJUSTMENT

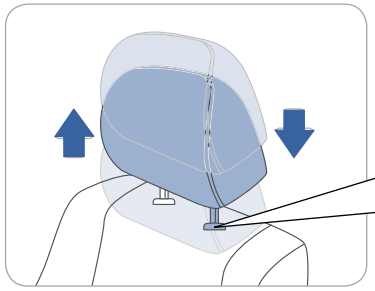

Height adjustment

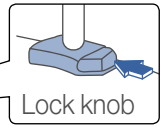

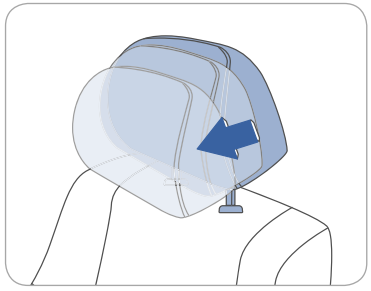

Forward/Rearward adjustment

To adjust the headrest rearward, pull the headrest all the way forward, then release.

Pull headrest gently forward to allow adjustment to 3 different positions.

SEAT BELT ADJUSTMENT (Front seat)

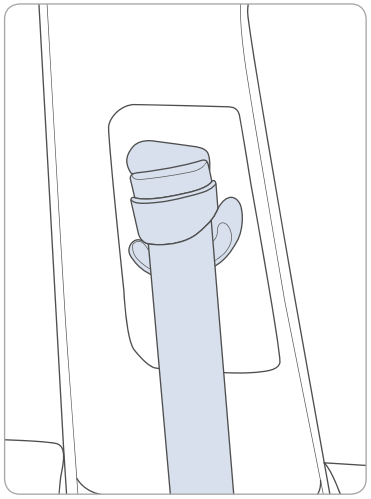

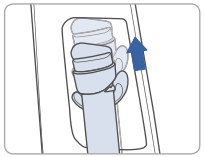

Pull up to raise.

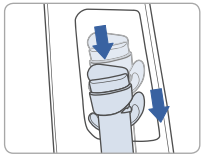

Press button and push down to lower.

BASIC SAFETY PRECAUTIONS

Whenever operating the vehicle, make sure that you and your occupants are properly wearing your seat belts. Small children should always ride in the rear seat in the appropriate child restraint system (see the Owner's Manual for child safety details). Never place children under 13 years old in the front seats to avoid injury that may result from air bag deployment. Always refer to the Owner's Manual for complete safety precaution information.

NOTE
If the driver's seat belt is not fastened when the ignition key is turned to the ON or START position, the seat belt reminder light will blink and the warning chime will sound for approximately six seconds to remind the driver to fasten the driver's seat belt.

OCCUPANT CLASSIFICATION SYSTEM

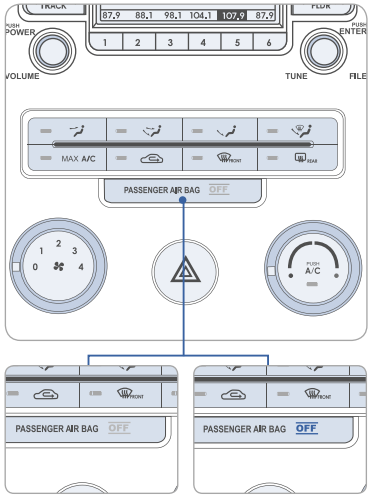

Passenger air bag off indicator

The occupant classification system will disable the right front passenger's air bag under certain conditions (light on).

The light will not illuminate when the passenger's air bag is enabled.
Refer to the Owner's Manual for a complete description of this system.

TILT AND TELESCOPIC STEERING WHEEL (if equipped)

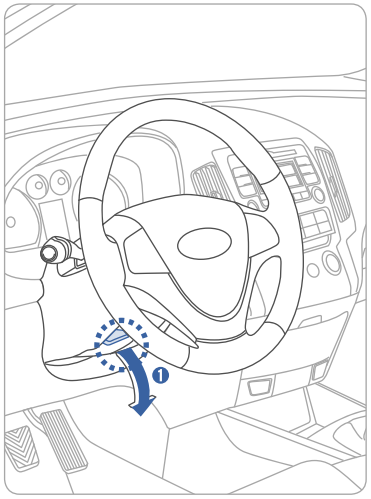

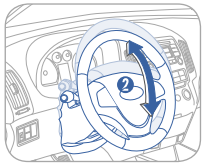

Tilt

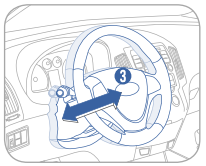

Telescopic
(if equipped)

NOTE: Do not adjust while driving.
1. Push the lever downward.
2. Set the angle and height.
3. Pull the lever upward.

OUTSIDE REARVIEW MIRROR (if equipped)

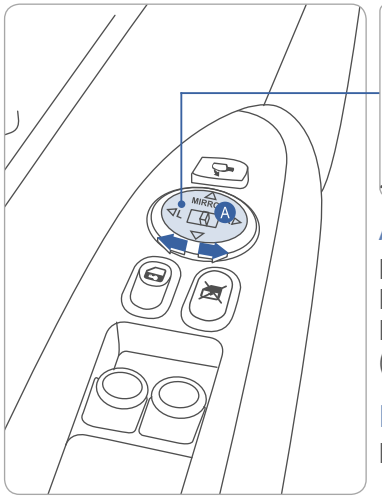

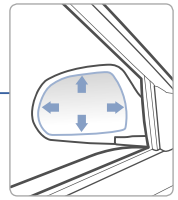

Adjusting

Move the selecting switch Ⓐ to the R (right) or L (left).
Depress the appropriate direction (◂▸) on the switch.

Middle position

Lock the control.

CENTRAL DOOR LOCK SWITCH

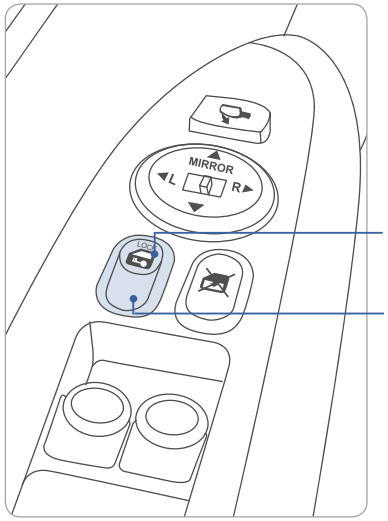

CHILD-PROTECTOR REAR DOOR LOCK

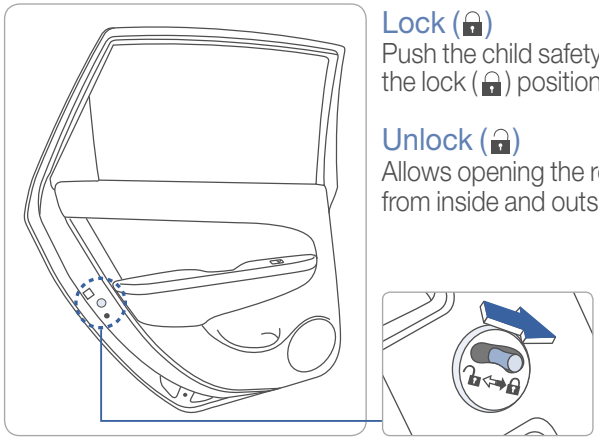

Lock ( )
Push the child safety lock to the lock ( ) position.

Unlock ( )
Allows opening the rear door handle from inside and outside the vehicle.

REMOTE KEYLESS ENTRY (if equipped)

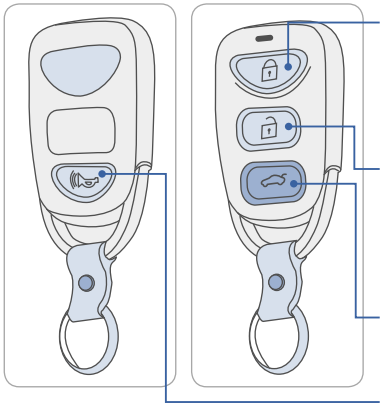

Lock ( )
Press the button
Once - Lock
Twice - Confirmation chirp

Unlock ( )
Press the button
Once - Unlock driver's door
Twice - Unlock all doors

Tailgate unlock ( )
NOTE: Tailgate does not pop open

Alarm ( )
Press and hold
Press any button to turn off panic

FUEL FILLER LID

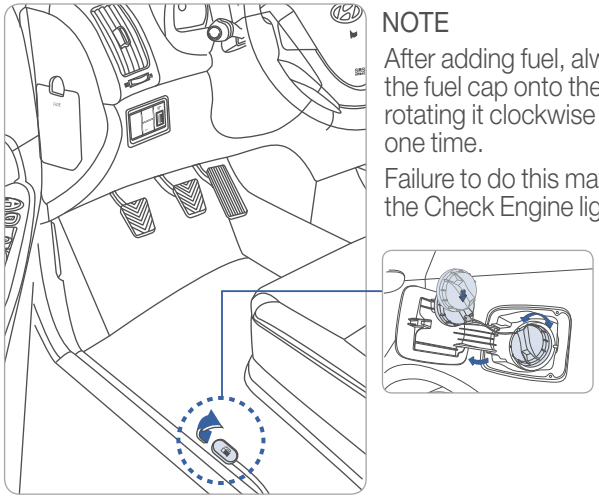

NOTE

After adding fuel, always reinstall the fuel cap onto the filler neck by rotating it clockwise until it clicks one time.

Failure to do this may result in the Check Engine light illuminating.

HEADLIGHTS AND FOG LIGHTS (if equipped)

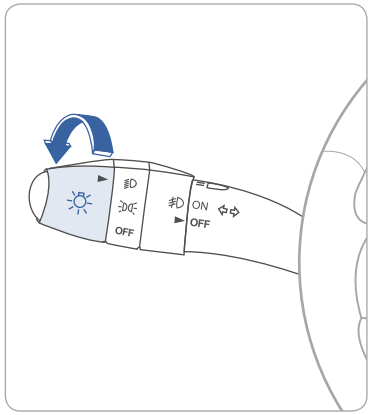

OFF OFF position

Parking light position

Headlight position

Turn signals and lane change signals

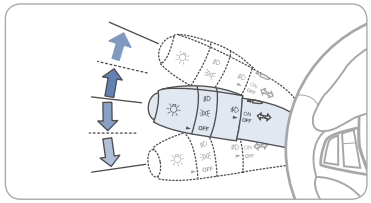

Will signal 3 times with half movement of stalk for lane change.

Flashing headlights

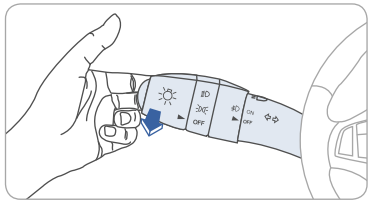

High beam

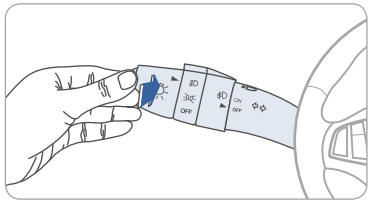

Fog lights (if equipped)

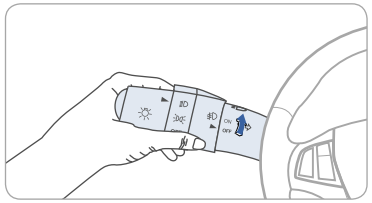

Escort Function

Headlights may stay on for 30 seconds after exiting and locking vehicle.
Press remote lock button twice to turn headlights off.
See Owner's Manual for more detail.

WIPER AND WASHER

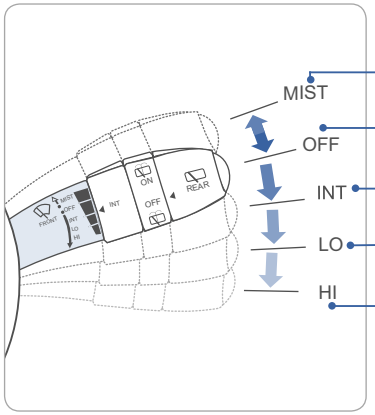

Windshield wiper / washer

- **MIST** - Single wipe
- **OFF** - Off
- **INT** - Intermittent wipe
- **LO** - Normal wiper speed
- **HI** - Fast wiper speed

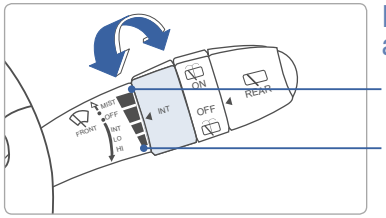

Intermittent wipe time adjustment

Fast wiper speed

Slow wiper speed

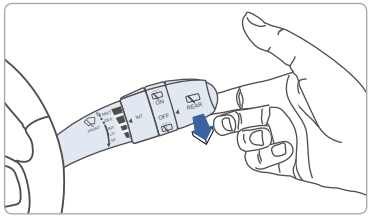

Wash with brief wipes

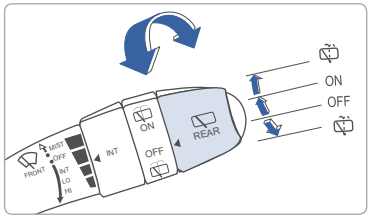

Rear window wiper / washer

- - Spray washer fluid
- **ON** - Normal wipe operation
- **OFF** - Off
- - Wash with brief wipes

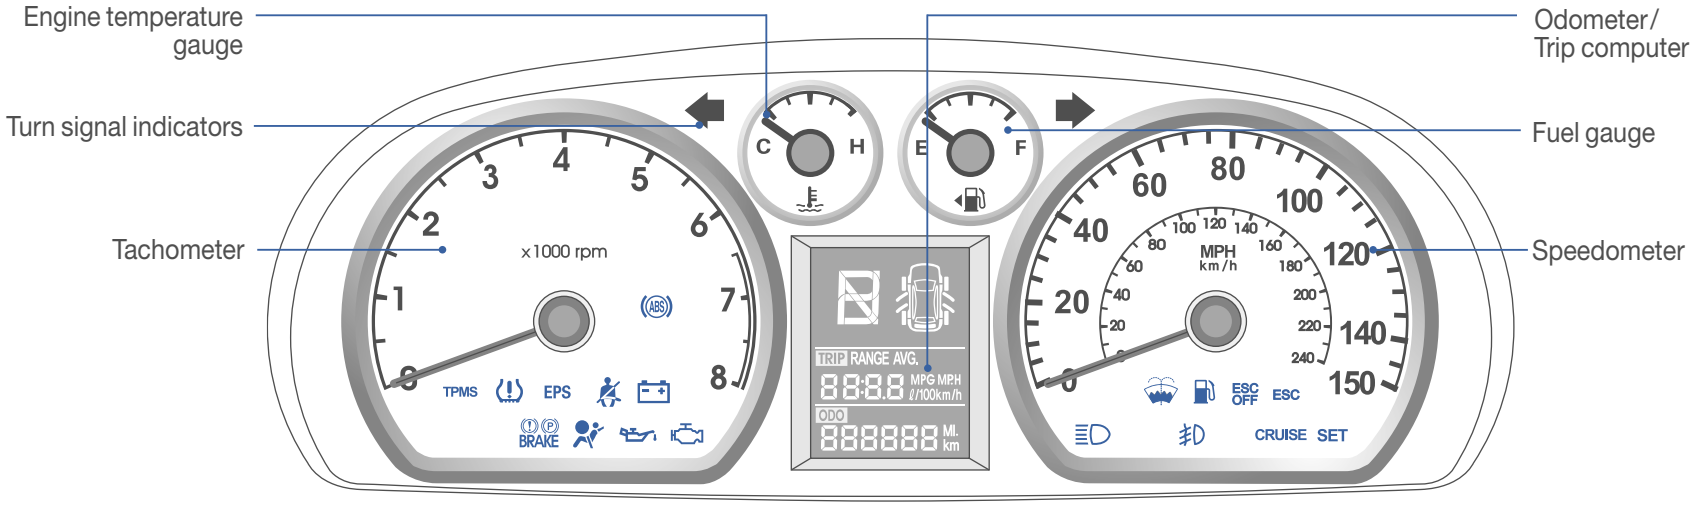

WARNINGS AND INDICATORS

Air bag warning light	Parking brake & Brake fluid warning light	ABS warning light
Seat belt warning light	Charging system warning light	Engine oil pressure warning light
Turn signal indicator	Front fog light indicator*	High beam indicator
TPMS (Tire Pressure Monitoring System) malfunction indicator	Low Tire Pressure Indicator	Malfunction indicator light
CRUISE Cruise indicator*	SET Cruise SET indicator*	Shift pattern indicator
ESC ESC (Electronic Stability Control) indicator	ESC OFF ESC (Electronic Stability Control) OFF indicator	EPS Electric Power Steering system warning light
Low fuel level warning light	Low washer warning indicator	Door and tailgate open warning light*

* : if equipped

INSTRUMENT PANEL ILLUMINATION

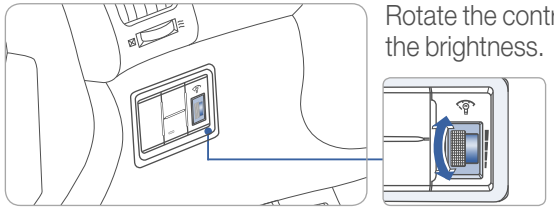

Rotate the control knob to adjust the brightness.

TRIP COMPUTER (if equipped)

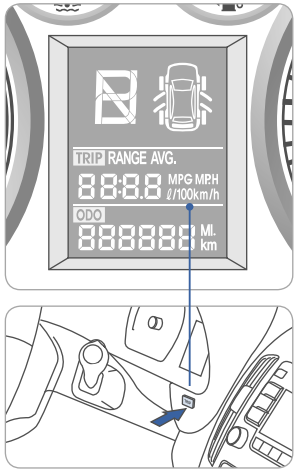

Press the TRIP button to select function as follows:

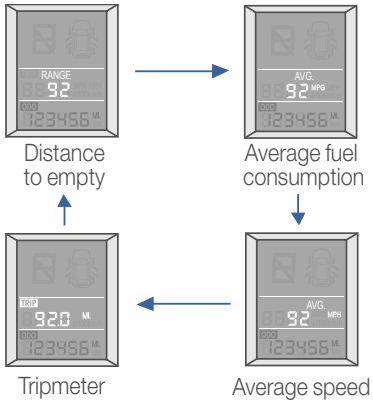

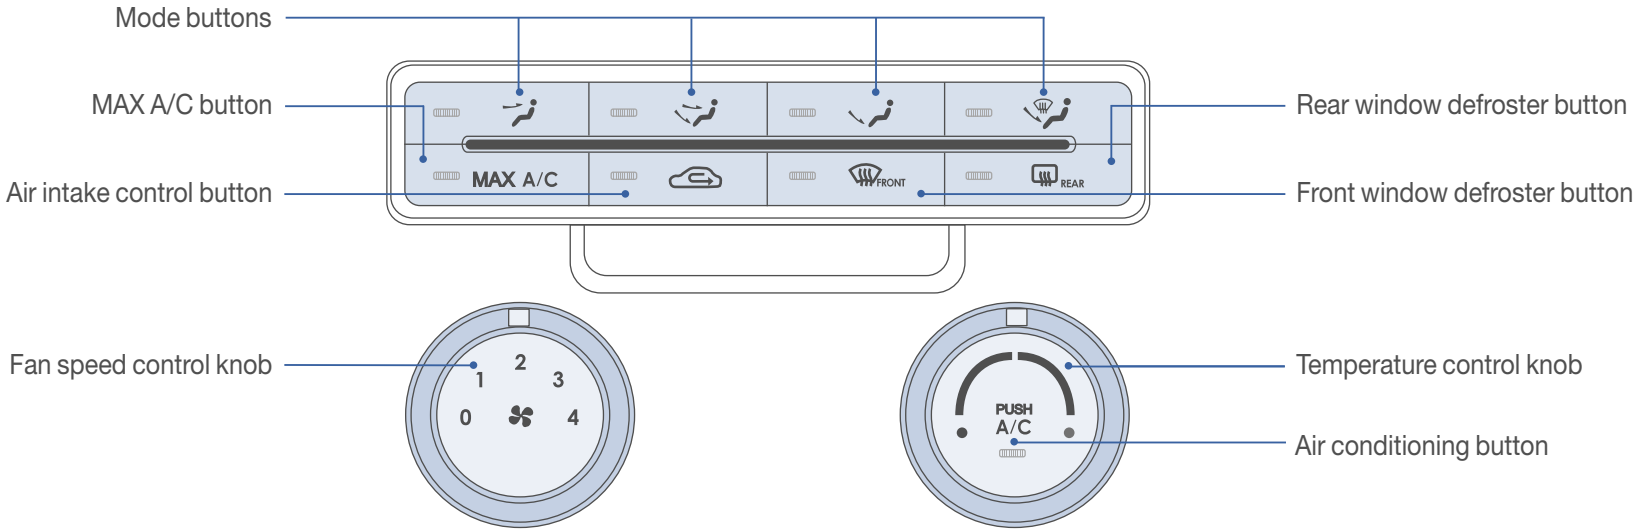

DEFROSTING / DEFOGGING

1. Press the front windshield defrost control.

2. Set the temperature control to the warmest setting.

3. Set the fan speed to the highest setting.

REAR WINDOW DEFROSTER

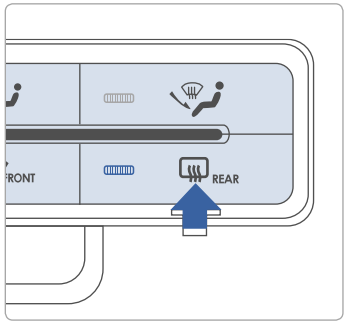

Press to activate/deactivate the rear defroster.

AIR INTAKE CONTROL

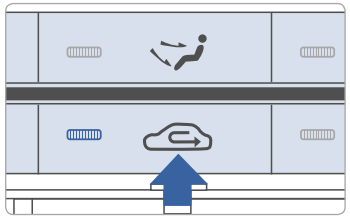

Outside (fresh) air position

Recirculated air position

MODE SELECTION

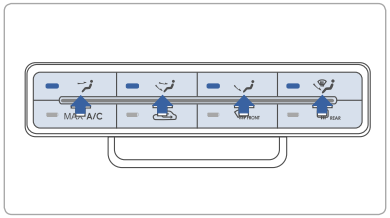

Changing the direction of the air flow as follows:

- MAX A/C — MAX A/C-Level
- Floor Level
- Face Level
- Floor/ Defrost-Level
- Bi-Level
- Defrost-Level

AUDIO

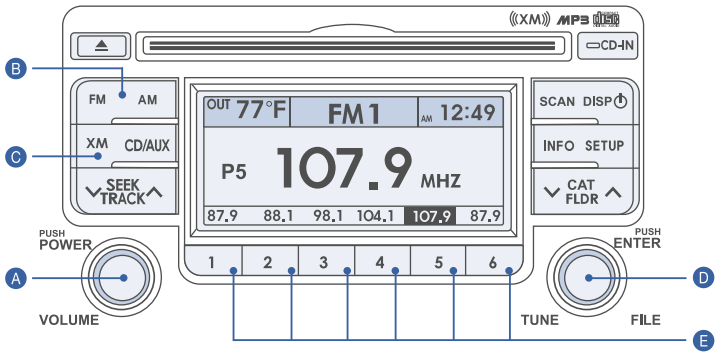

Press POWER button (A) to turn radio on.

- TUNING / LISTENING TO CHANNELS
  1. Press FM/AM (B) or XM® (C).
  2. Rotate Audio Control knob (D) to desired channel.

  NOTE
  A clear view of the southern sky is recommended to ensure XM® radio reception.
- SETTING PRESET MEMORY BUTTONS (FM/AM/XM®)
  Press and hold any preset button (1-6) (E) until audible beep is heard to store current channel.
- ADJUSTING THE SOUND CONTROL
  1. Press TUNE knob (D).
  2. Select “Bass, Middle,Treble, Balance, Fader” by pressing on TUNE knob (D). Rotate TUNE knob (D) to adjust.
  3. Press TUNE knob (D) when done.

Please refer to your Owner’s Manual for more detailed information on how to use your audio system.
Complimentary XM® subscription ends three months following the vehicle date of sale.
Please contact XM® Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM® subscription.

STEERING WHEEL AUDIO CONTROL (if equipped)

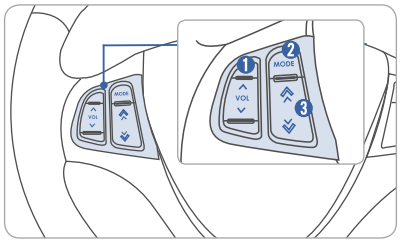

1. VOLUME
   Raises or lowers speaker volume.
2. MODE
   Changes the audio source.
3. SEEK/PRESET
   Changes station.

AUX, USB AND iPod PORT (if equipped)

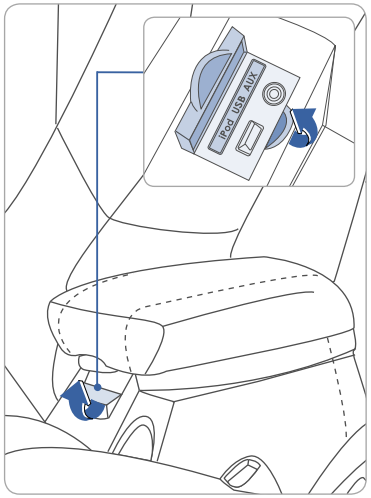

Use the input jack to connect an external audio device and listen to it through the audio system in your vehicle.

NOTE
To operate your iPod® through the vehicle’s audio system, a Hyundai adapter cable is required. This cable can only be purchased at your local Hyundai dealer.

iPod® is a trademark of Apple Inc.

SUNROOF (if equipped)

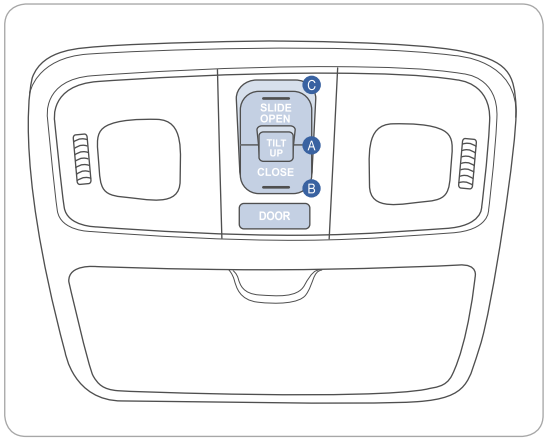

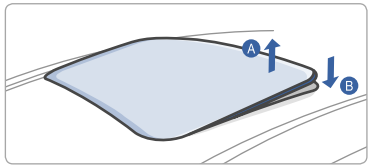

Tilt

To tilt up, press the Tilt Up button (A).
To close, press the Close button (B).

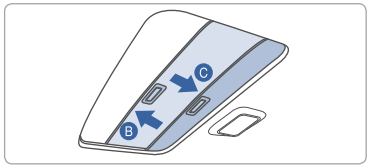

Sliding the sunroof

Press and hold Slide Open button (C) to desired opening, then release.
To close, press and hold the Close button (B).

SEAT WARMER (if equipped)

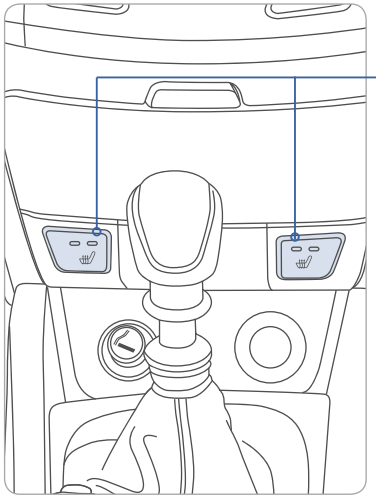

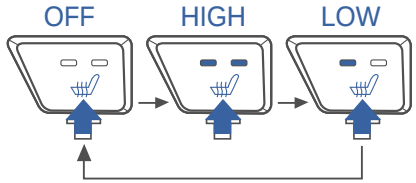

Each time you push the button, the temperature setting of the seat is changed as follows:

CLOCK ADJUSTMENT

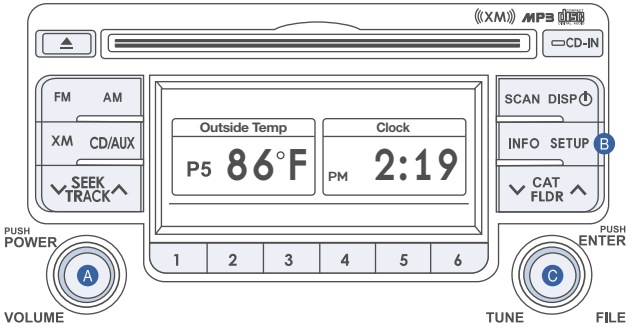

1. Press POWER button (A) to turn radio off.
2. Press SETUP button (B).
3. Turn TUNE knob (C) to change hours.
4. Press TUNE knob (C) to switch to minutes, then turn knob to adjust.
5. Unit automatically returns to normal display within a few seconds of final clock adjustment.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

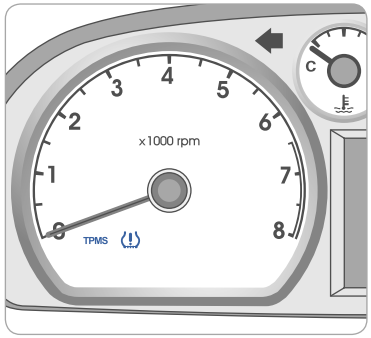

TPMS MALFUNCTION INDICATOR

TPMS Illuminates when there is a malfunction with the TPMS system. Inspect all tires and adjust tire pressure to specification. If the lamp remains illuminated, have the system checked by an authorized Hyundai dealer as soon as possible.

LOW TIRE PRESSURE INDICATOR

(!) Illuminates if one or more of your tires is significantly under-inflated.

CRUISE CONTROL SYSTEM (if equipped)

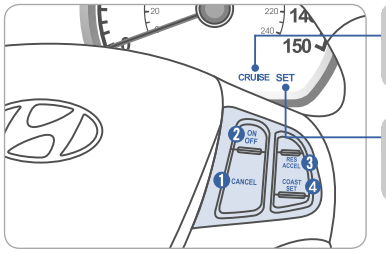

CRUISE Cruise indicator

SET Cruise set indicator

To set a cruising speed

1. Press ❷ and the CRUISE indicator will illuminate in the instrument cluster. Accelerate to desired cruising speed (above 25 mph).
2. Press ❹ and remove your foot from the accelerator pedal.

To accelerate or decelerate speed

Press ❸ to increase set cruising speed.

Press ❹ to decrease set cruising speed.

To Cancel Cruising Speed

Press CANCEL ❶ or press brake pedal, or press ON/OFF ❷.

AUTOMATIC TRANSMISSION (if equipped)

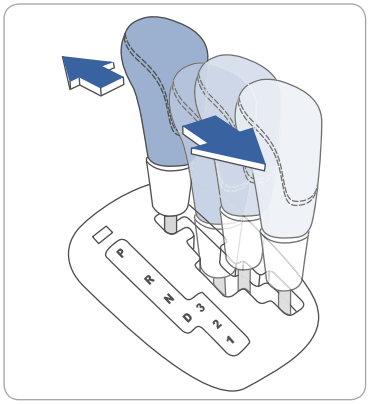

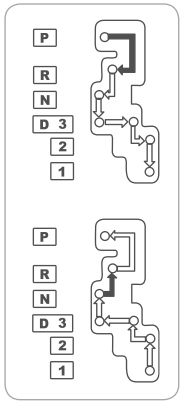

(➡) : To shift, depress the brake pedal when the ignition switch is in the ON position.

(⇨) : The shift lever can be shifted freely.

SHIFT LOCK RELEASE

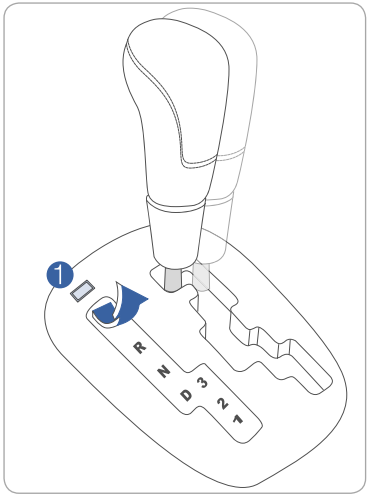

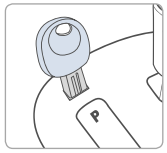

Shift-lock override

If the shift lever cannot be moved from the P (Park) position with the brake pedal depressed, continue depressing the brake, then do the following:

1. Carefully remove the cap ❶.
2. Insert a screwdriver (or key) into the access hole and press down on the screwdriver (or key).
3. Move the shift lever.
4. Have your vehicle inspected by an authorized Hyundai dealer immediately.

MANUAL TRANSMISSION (if equipped)

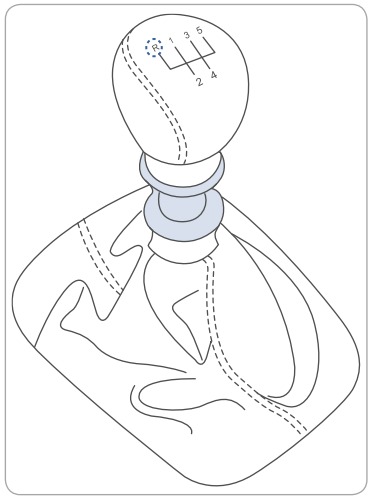

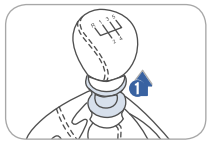

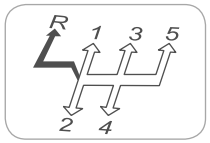

Engaging reverse

When shifting into R (Reverse) gear, lift the collar tab ❶ up and then shift into R (Reverse) gear position.

ELECTRONIC STABILITY CONTROL (ESC)

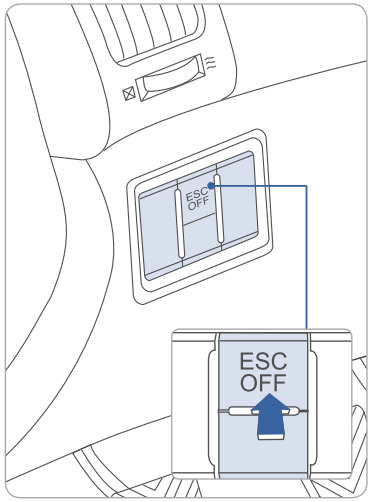

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

- To turn the ESC off, press the ESC OFF button.
- ESC off indicator will display in instrument cluster.
- To turn ESC on, press it again.
- System defaults to ON position at start.

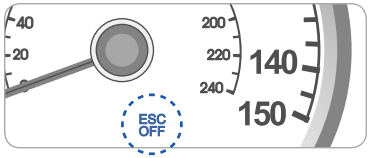

ELANTRA TOURING CUSTOMER DELIVERY CHECK LIST (continued)

Tire Pressure Monitoring System (TPMS) – Page 18

LOW TIRE PRESSURE INDICATOR
Illuminates if one or more of your tires is significantly under-inflated.

TPMS MALFUNCTION INDICATOR
Illuminates when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer as soon as possible.

Windshield Wiper / Washer – Page 09

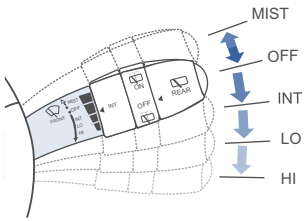

- To activate wipers move the switch down to one of the three positions (INT, LO, HI).
- To adjust "INT" speed rotate dial.
- To spray washer fluid, pull lever toward you.
- Push lever up for a single wiper pass.

Clock Adjustment – Page 17

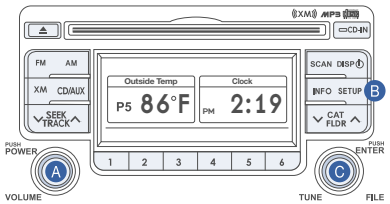

1. Press POWER button (A) to turn radio off.
2. Press SETUP button (B).
3. Turn TUNE knob (C) to change hours.
4. Press TUNE knob (C) to switch to minutes, then turn knob to adjust.
5. Unit automatically returns to normal display within a few seconds of final clock adjustment.

DURING DELIVERY

- o DEMONSTRATE AUDIO SYSTEM OPERATION INCLUDING PRESETS (OPTIONAL - iPod® CABLE AVAILABLE)
- o CONSIDER OWNER'S PREVIOUS VEHICLE TO EXPLAIN WIPER/ HEADLIGHT FUNCTIONS
- o DEMONSTRATE HOW TO SET THE CLOCK
- o EXPLAIN AND REVIEW FIRST SERVICE PROCEDURE AND AMERICA' S BEST WARRANTY—PROVIDE SERVICE REPRESENTATIVE BUSINESS CARD
- o ASK IF CUSTOMER HAS ANY QUESTIONS

Sales Consultant Date Sales Manager Date

Customer Date

@

Email

ELANTRA TOURING CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- o CONFIRM "GOOD BATTERY" AND STAPLE TEST TICKET HERE
  ß MIDTRONICS TEST 600A(2.4L) OR 550A(2.0L)
- o VERIFY ALL TIRE PRESSURES ARE 32PSI (5.5JX15, 6.0JX16 or 7.0JX17)
  LF ☐ LR ☐ RF ☐ RR ☐
- o VERIFY ALL REMOTE FUNCTIONS: LOCK / UNLOCK / ALARM
- o VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES
- o ENSURE FLOORMATS ARE SNAPPED INTO PLACE (if applicable)

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

Manual Climate Control - Pages 12~13

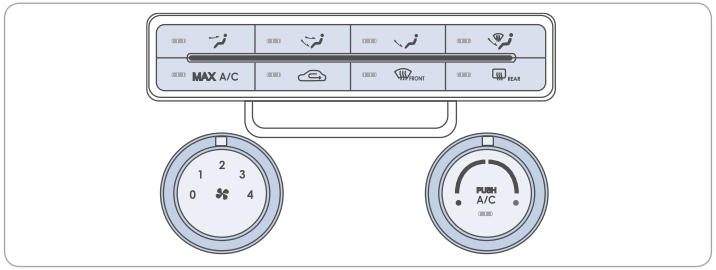

ß To speed up front windshield defogging, increase temperature and fan speed and then select defrost button.